COASTER FINE FURNITURE

2438

BLACK WROUGHT IRON SUNBURST DESIGN VANITY SET. BLACK VELOUR COVER ON STOOL.

ASSEMBLY INSTRUCTION

COASTER FINE FURNITURE

www.coastercompany.com

Assembly Instruction

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

⚠ Warning!

1. Don't attempt to repair or modify parts that are broken or defective.Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION FOR VANITY :

A. LEFT SIDE FRAME		1 PC
B. RIGHT SIDE FRAME		1 PC
C. FRONT APRON		1 PC
D. REAR CROSSBAR		2 PCS
E. MIRROR		1 PC
F. MIRROR SUPPORT		2 PCS
G. GLASS		2 PCS

HARDWARE PACKAGE:

Z	DESCRIPTION	FIGURE	QTY
1	ALLEN BOLT		12 PCS
2	VANITY BOTTOM CAP		4 PCS
3	BOLT		2 PCS
4	CAP		2 PCS
5	MIRROR SUPPORT CAP		2 PCS
6	GLASS PAD		8 PCS
7	FINIAL		2 PCS
8	ALLEN KEY		1 PC

STEP 1

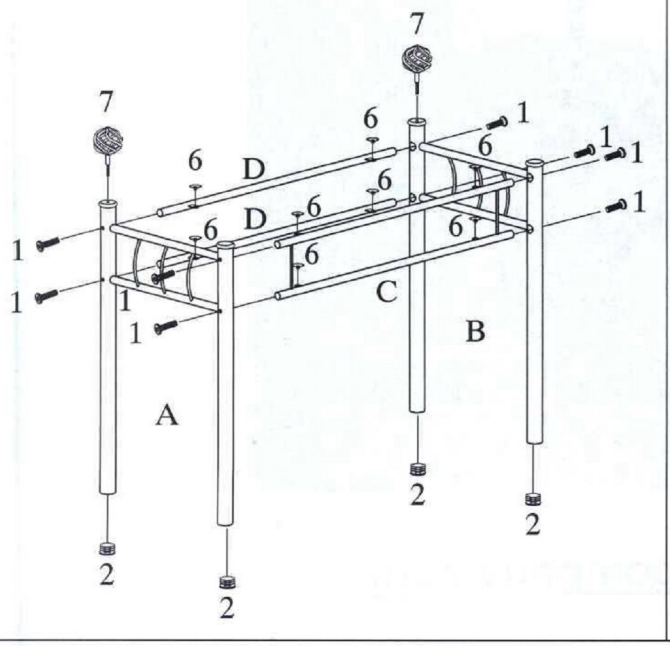

STEP 2

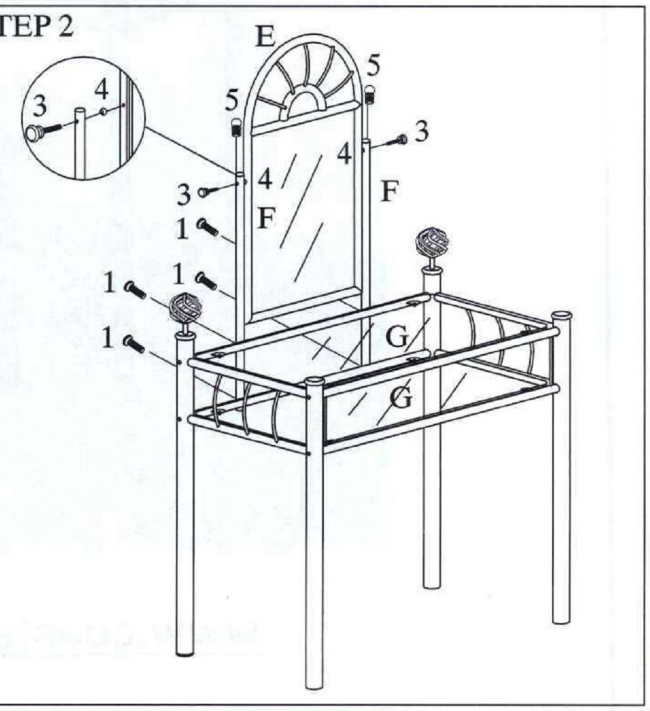

Assembly Instruction

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.

Warning!

1. Don't attempt to repair or modify parts that are broken or defective.Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishment.

PARTS IDENTIFICATION FOR STOOL :

H. SIDE FRAME 2 PCS

I. SIDE APRON 2 PCS

J. CUSHION 1 PC

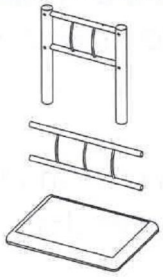

HARDWARE PACKAGE:

Z	DESCRIPTION	FIGURE	QTY
9	ALLEN BOLT		8 PCS
10	SCREW		4 PCS
11	STOOL BOTTOM CAP		4 PCS

STEP 3

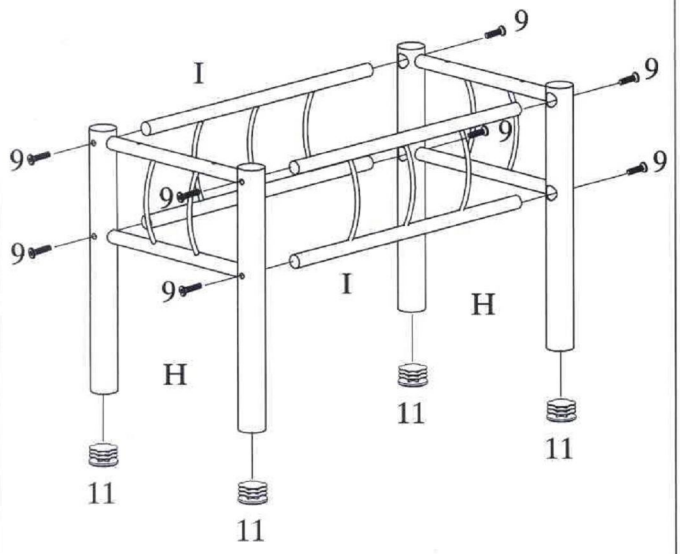

STEP 4

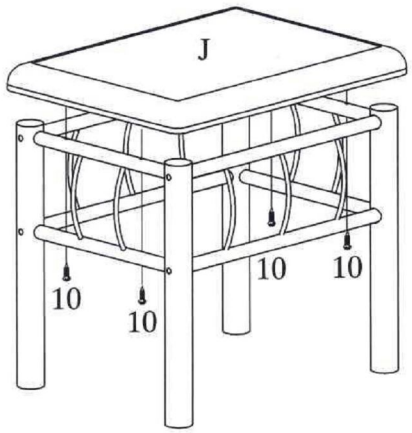

ITEM : 2438

Assembly Instruction as below:

Step 1:

Insert the vanity bottom caps (2) into the left side frame (A) and right side frame (B), and then fix the side frame (A & B) to the front apron (C) and rear crossbar (D) with bolts (1). Insert the glass pad (6) into the front apron (C) and rear crossbar (D). Attach the ball shaped finial (7) to the side frame (A & B).

Step 2:

Fix the mirror support (F) to the rear crossbar (D) with the bolts (1). Fix the mirror (E) to the mirror support (F) with the caps (4) and bolts (3), and then insert the mirror support caps (5) into the end tube of mirror support (F). Place the glass (G) on the glass pad (6).

Step 3:

Assemble the side frame (H) with side apron (I) using bolts (9). Insert the stool bottom caps (11) into the end tube of side frame (H).

Step 4:

Screw in the cushion (J) using screws (10) and tighten into place.